

SPARE PARTS MASTER


Operating Instructions

FILE-TYPE COMPACT DISC PLAYER

PD-F100

CDFILE
100-DISC

COMPACT
disc
DIGITAL AUDIO

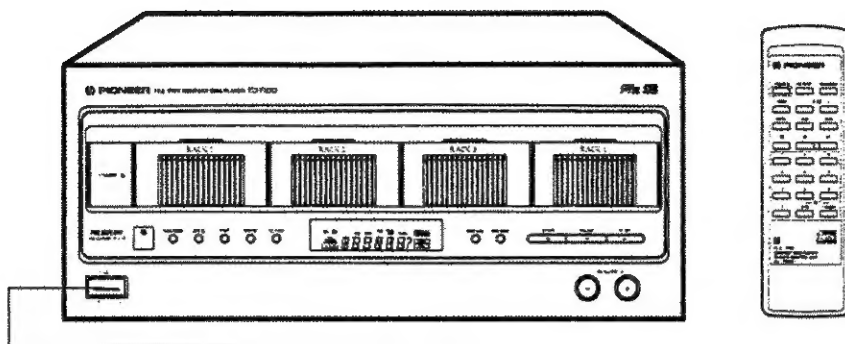

POWER ON DEMO display

POWER ON DEMO display mode allows you to see variations of the display. To enter the POWER ON DEMO display mode, press POWER and then **◀◀** within 1 second after turning on the power.

To cancel the POWER ON DEMO display mode, press any button. If the STOP button is pressed after canceling the POWER ON DEMO display mode, the player enters POWER ON DEMO display mode.

Thank you for buying this Pioneer product.

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT NOTICE

[For U.S. and Canadian models]

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

[For Canadian model]

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.


LINE VOLTAGE SELECTOR SWITCH

Only multi-voltage models are provided with this switch. U.S., Canadian, European, U.K., and Australian models are not provided with this switch.

Mains voltages in Saudi Arabia are 127V and 220V only.

The line voltage selector switch is located on the rear panel of this player. Before your player is shipped from the factory, the switch is set to the power requirements of the player's destination. Check that it is set properly before plugging the power cord into the outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows:

- Use a medium-sized (flat blade) screwdriver. Insert the tip of the screwdriver into the groove of the selector switch and turn it so that the power voltage marking of your area points to the arrow.

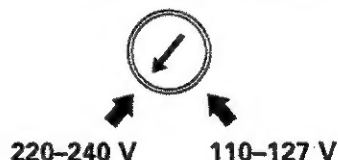

CAUTION:

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

This player is for consumer use. If the player is used in business (for example, using for a long period at the restaurant), the player is repaired with charge even though it is under warranty.

PIONEER
The Art of Entertainment

IMPORTANT



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SAFETY INSTRUCTIONS

READ INSTRUCTIONS – All the safety and operating instructions should be read before the appliance is operated.

RETAIN INSTRUCTIONS – The safety and operating instructions should be retained for future reference.

HEED WARNING – All warnings on the appliance and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS – All operating and use instructions should be followed.

WATER AND MOISTURE – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

LOCATION – The appliance should be installed in a stable location.

WALL OR CEILING MOUNTING – The appliance should not be mounted to a wall or ceiling.

VENTILATION – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

HEAT – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

POWER SOURCES – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

POWER-CORD PROTECTION – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

POLARIZATION – If your purchased product is provided with a polarized power plug, please read the following instructions. This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

CLEANING – The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

POWER LINES – An outdoor antenna should be located away from power lines.

NONUSE PERIODS – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

OBJECT AND LIQUID ENTRY – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

DAMAGE REQUIRING SERVICE – The appliance should be serviced by a Pioneer authorized service center or qualified service personnel when:

- The power-supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- The appliance has been dropped or the enclosure damaged.

SERVICING – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

OUTDOOR ANTENNA GROUNDING – If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

In the U.S.A. section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Fig. A.

CART – An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



NEC – NATIONAL ELECTRIC CODE

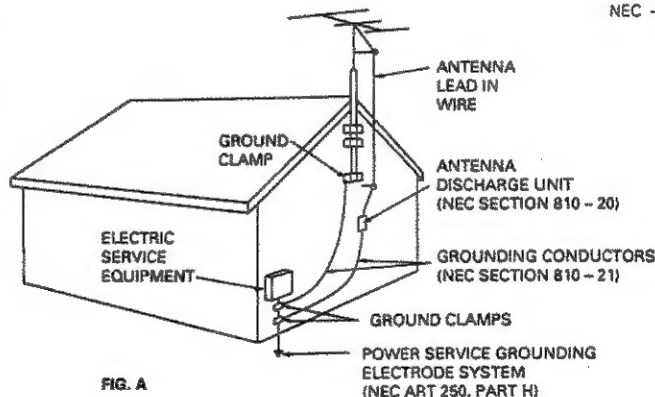


FIG. A

[FOR EUROPEAN AND U.K. MODELS]

CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.

Refer all servicing to qualified personnel.

The following caution label appears on your player.

Location: rear of the player

**CLASS 1
LASER PRODUCT**

VRW-328

IMPORTANT

FOR USE IN THE UNITED KINGDOM

The wires in this mains lead are coloured in accordance with the following code :

Blue : Neutral
Brown : Live

If the plug provided is unsuitable for your socket outlets, the plug must be cut off and a suitable plug fitted.

The cut-off plug should be disposed of and must not be inserted into any 13 amp socket as this can result in electric shock. The plug or adaptor or the distribution panel should be provided with 5 amp fuse. As the colours of the wires in the mains lead of this appliance may not correspond with coloured markings identifying the terminals in your plug, proceed as follows :

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not connect either wire to the earth terminal of a three pin plug.

NOTE

After replacing or changing a fuse, the fuse cover in the plug must be replaced with a fuse cover which corresponds to the colour of the insert in the base of the plug or the word that is embossed on the base of the plug, and the appliance must not be used without a fuse cover. If lost replacement fuse covers can be obtained from your dealer.

Only 5 A fuses approved by B.S.I. or A.S.T.A to B.S. 1362 should be used.

[FOR U.S. MODEL]

CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.



Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel

Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



CONTENTS


CONFIRM SUPPLIED ACCESSORIES	5
PUT BATTERIES INTO THE REMOTE	
CONTROL UNIT	5
REMOTE CONTROL OPERATIONS	5
CAUTIONS REGARDING HANDLING	6
CONNECTIONS	7
BEFORE OPERATING THE PLAYER	8
NAMES AND FUNCTIONS OF PARTS	9
BASIC OPERATION	10
To play a compact disc	10
Selecting the playing mode	11
Time display	11
Direct search - To search for a particular disc or track ...	12
Disc search - To search for a particular disc	12
Track search - To search for a particular track	12
Manual search - To search for a particular passage	12
VARIOUS OPERATION	13
CUSTOM playback	13
To repeat playback (repeat play)	14
Random playback - To play all tracks in random order ...	14
ADLC (Automatic Digital Level Controller)	14
TO PLAY ONLY DESIRED TRACKS/DISCS	15
Program playback - To program tracks/discs	
in desired order	15
To preserve the program	16
Programming a pause	16
To erase a programmed step	16
To clear all of the program contents and	
to cancel the program mode	16
TROUBLESHOOTING	17
SPECIFICATIONS	18
INDEX CARD	19

TRANSPORTATION SCREW

In order to protect the inside of this unit from the vibration and shocks during transportation, the internal mechanism is fixed with the transportation screws.

Before using the player, remove the three transportation screws located on the bottom panel by turning a crossed or flat-blade screwdriver counter-clockwise.

If this unit is placed with the top panel down and the screws are removed, the internal mechanism will fall. Be sure to place the unit with left side panel down and remove the screws (red x 3). Before tilting the unit, confirm that no discs are inserted in the player.

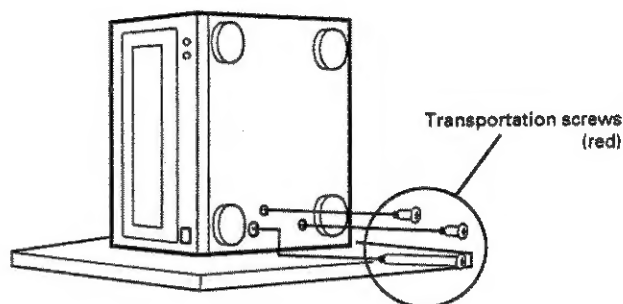

Retain all screws as they will be necessary when the unit is to be transported.

Never remove any screws other than the transportation screws.

- When re-transporting this unit in the future, remove all discs in the player and close all Rolling Racks. Turn off the POWER STANDBY/ON switch and leave the unit in STANDBY mode for 10 seconds or more. And then, tighten the transportation screws by turning the crossed or flat-blade screwdriver clockwise until it stops. Be careful not to tighten the screws too firmly. When tightening the screws, place the unit with left side panel down.

THE POWER SWITCH IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION.

"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."


[For Canadian model]

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

CONFIRM SUPPLIED ACCESSORIES

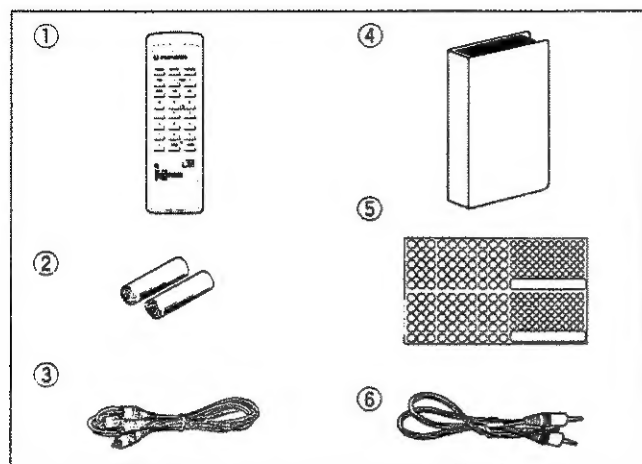


- ① Remote control unit x 1
- ② AAA/R03 dry cell batteries x 2
- ③ Output cable x 1
- ④ CD liner notes file x 2
- ⑤ Index label sheet x 1
- ⑥ Control cable x 1 (except for European models)


● Affixing the index labels

Use the labels (1 - 100) as shown below, and affix them as corresponding to the disc number shown on the groove of the Rolling Rack.

The followings are examples of using labels

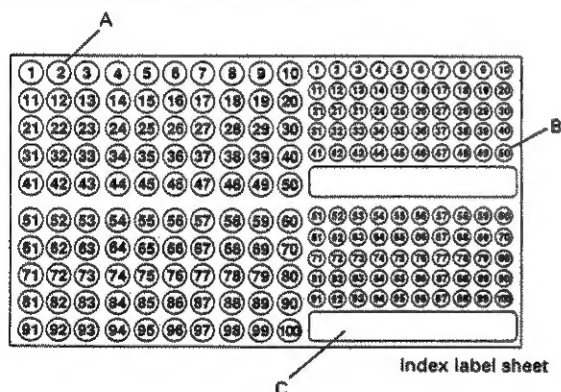


Index label sheet

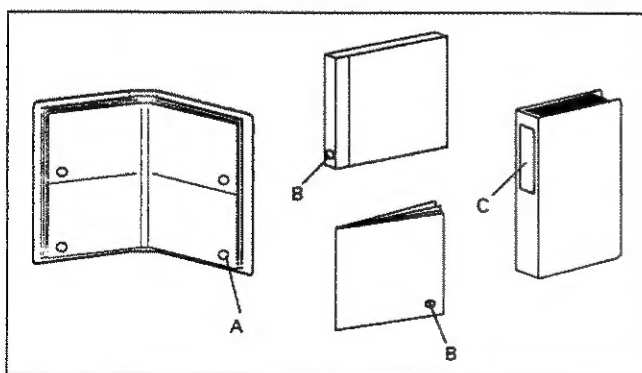

- A: For supplied CD liner notes file
- B: For CD disc case or disc's jacket
- C: For the title of the supplied CD liner notes file

PUT BATTERIES INTO THE REMOTE CONTROL UNIT

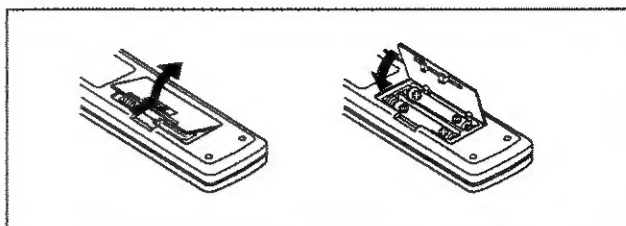

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries, taking care to align the \oplus and \ominus polarities correctly.

NOTES:


- In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment, and replace the batteries with new ones.
- Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.

Incorrect use of batteries may cause leakage or rupture. Always be sure to follow these guidelines:

- A. Always insert batteries into the battery compartment correctly matching the positive \oplus and negative \ominus polarities, as shown by the display inside the compartment.
- B. Never mix new and used batteries.
- C. Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.

REMOTE CONTROL OPERATIONS

When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (Remote Sensor) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

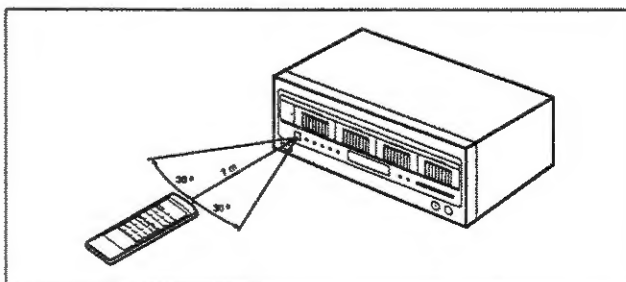

NOTE:

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

CAUTIONS REGARDING HANDLING

Location

Install the player in a well ventilated location where it will not be exposed to high temperature or humidity.

Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Installation of the player in a damp or dusty environment may also result in malfunction or accident. (Avoid installation near cookers etc., where the player may be exposed to smoke from oil, steam or heat.)

Do not install the player on the tottered stand, unstable or inclined place.



Precautions regarding installation

- Placing and using the compact disc player for long periods on heat-generating sources such as amplifiers will affect performance. Avoid placing the player on heat-generating sources.
- Install this compact disc player as far as possible from tuners and TV sets. A compact disc player installed in close proximity to such equipment, may cause noise or degradation of the picture.
- Such noise may be particularly noticeable when an indoor antenna is used. In such cases, make use of an outdoor antenna, or turn off power to the compact disc player.
- **Please place this unit on a level surface.**




Cleaning the player

To clean the PLAYER wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Also use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

Storing discs

- Discs are made of the same kinds of plastic used for conventional analog audio records. Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures. Avoid leaving discs in cars, since the seat of a car in direct sunlight can become unbelievably hot.
- Always read and abide by the precautionary notes listed on disc labels.

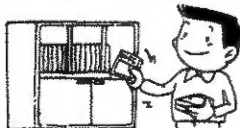

CD lens cleaner

The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, ask your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

Condensation

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises sharply, condensation may form inside, and the unit may not be able to attain its full performance. If this occurs, allow the unit to stand for about an hour or raise the room temperature gradually.



Cleaning and handling compact discs

- The presence of fingerprints or smudges on the surface of the disc will not directly affect the recorded signals, but depending on the degree of contamination, the brightness of the light reflected from the signal surfaces may be reduced, causing degradation of sound quality. Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.



- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.




- With this player, use discs which display the mark shown below. (Optical audio digital discs.)
- When holding discs, do not touch their signal surfaces. Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.



PRECAUTIONS:


- Be careful not to catch your finger when closing the Rolling Rack or the front panel.

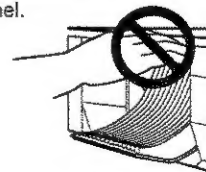

- Never insert anything other than a disc in the player.
- Never insert an 8-cm CD or its adaptor into the Rolling Rack.
- Never insert more than one disc in the groove of the Rolling Rack.
- When carrying or tilting this unit, remove all discs stored in the Rolling Rack.
- Never load anything on the front panel when it is opened.

CONNECTIONS

- Make sure that all of the components are turned off before making connections.

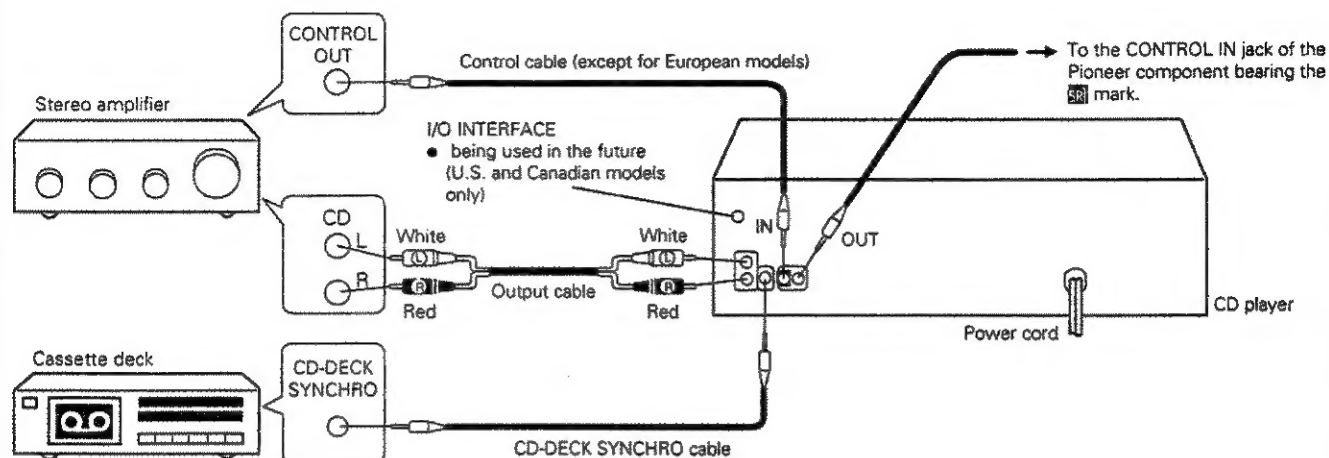

Making connections

- 1 Connect the OUTPUT jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.
- Be sure not to connect this unit to the amplifier's PHONO jacks, as sound will be distorted and normal playback will not be possible.
- 2 Connect the power cord to a household AC wall outlet.
- Make sure plugs are inserted fully into the wall outlet.

NOTE:

Do not connect the power cord to an AC outlet on your amplifier.

CD-Deck synchro function

If you have a Pioneer cassette deck provided with the CD-Deck synchro function, connect the CD-DECK SYNCHRO jacks of the CD player and cassette deck. With this function, synchro recording can be carried out between player and deck.

- For details on connections and operation, refer to the operating instructions supplied with the cassette deck.
- The CD-DECK SYNCHRO cable is not supplied with the CD player.

System remote control with a Pioneer stereo amplifier that has the **SR** mark (except for European models)

When a Pioneer stereo amplifier bearing the **SR** mark is used, connect the CONTROL IN jack on the rear panel of the CD player to the CONTROL OUT jack of the amplifier. This will enable the CD player to be controlled using the remote control unit supplied with the stereo amplifier. If you do not plan to use this feature, it is not necessary to connect CONTROL IN/OUT jacks.


- The control cable is not supplied with the CD player.
- The remote control unit supplied with the amplifier can be used to control Play, Stop, Pause, Track/Disc Search and Disc Change operations.
- For instructions regarding connections and operation, refer to the operating instructions provided with your stereo amplifier.

NOTES:



- When a control cable is connected to the player's CONTROL IN jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier.
- Be sure to connect both of the control cable's plugs securely to the CONTROL IN and CONTROL OUT jacks. Do not connect only one end of the cable.
- Be sure to turn off the power of the amplifier before connecting the power cord and output cable.

BEFORE OPERATING THE PLAYER


1

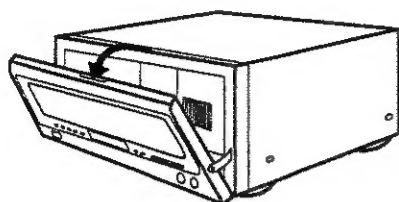

2

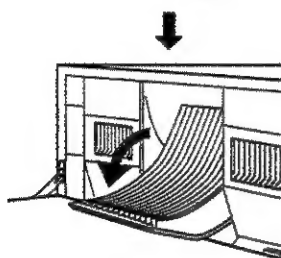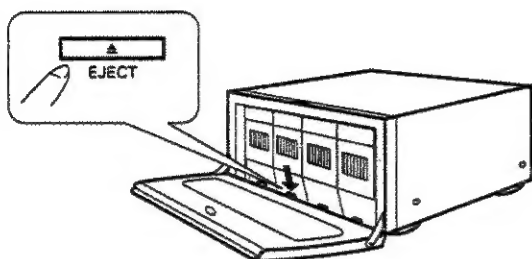


3

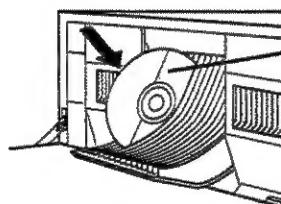


with the label
side rightward

4

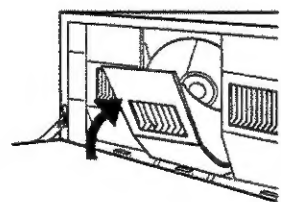

6

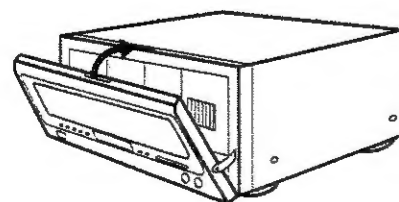

INSERT DISCS INTO THE ROLLING RACK

Insert desired discs into the Rolling Rack (1 ~ 4). Up to 25 discs may be inserted into each rack, and totally up to 100 discs can be inserted into the player. The disc grooves are numbered from the left side of the rack.

RACK 1 : Disc number 1 to 25

RACK 2 : Disc number 26 to 50

RACK 3 : Disc number 51 to 75

RACK 4 : Disc number 76 to 100

When the power is turned on, the rack indicators on the front panel light up. The rack indicator which contains the disc being played blinks. So, you can check which rack contains the disc being played.

The Rolling Rack which contains the disc being played cannot be opened. All Rolling Racks can be opened in stop mode.


- 1 Manually open the front panel toward you.
- 2 Press the EJECT (▲) button on the front of the desired rack.
- 3 Position discs with the label sides rightward.
- 4 Push the Rolling Rack back to its position.
- 5 Insert other discs into other racks by repeating steps 2 to 4.
- 6 Manually close the front panel.

CAUTION:

- If discs are inserted label side leftward, they will not be played. Insert them with the label side rightward.
- Never insert objects other than discs (song cards, explanations of disc contents, etc.) into the Rolling Rack.
- Do not touch the playing surface of discs (the side has no label) with hands or fingers.
- Never insert more than one disc in the groove of the Rolling Rack.
- Never insert an 8-cm CD or its adaptor into the Rolling Rack.
- Close the Rolling Rack completely.


NAMES AND FUNCTIONS OF PARTS

FRONT PANEL

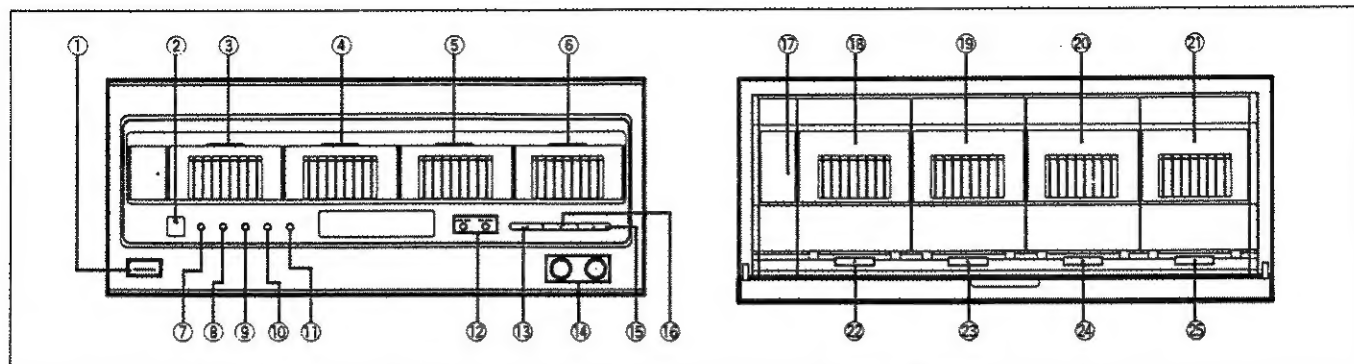

- ① **POWER STANDBY/ON switch**
- ② **Remote sensor**
Receives the signal from the remote control unit.
- ③ **Rack 1 indicator**
- ④ **Rack 2 indicator**
- ⑤ **Rack 3 indicator**
- ⑥ **Rack 4 indicator**
- ⑦ **RANDOM button**
- ⑧ **ADLC button**
- ⑨ **TIME button**
- ⑩ **MODE button**
- ⑪ **CLEAR button**
- ⑫ **Track/Manual search buttons**
(◀◀ ◀◀ / ▶▶ ▶▶)
- ⑬ **Stop button (■)**
- ⑭ **DISC NUMBER buttons (-/+)**
- ⑮ **Play button (▶)**
- ⑯ **Pause button (||)**
- ⑰ **STANDBY indicator**
- ⑱ **Rolling RACK 1**
- ⑲ **Rolling RACK 2**
- ⑳ **Rolling RACK 3**
- ㉑ **Rolling RACK 4**
- ㉒ **EJECT button for RACK 1 (▲)**
- ㉓ **EJECT button for RACK 2 (▲)**
- ㉔ **EJECT button for RACK 3 (▲)**
- ㉕ **EJECT button for RACK 4 (▲)**


REMOTE CONTROL UNIT

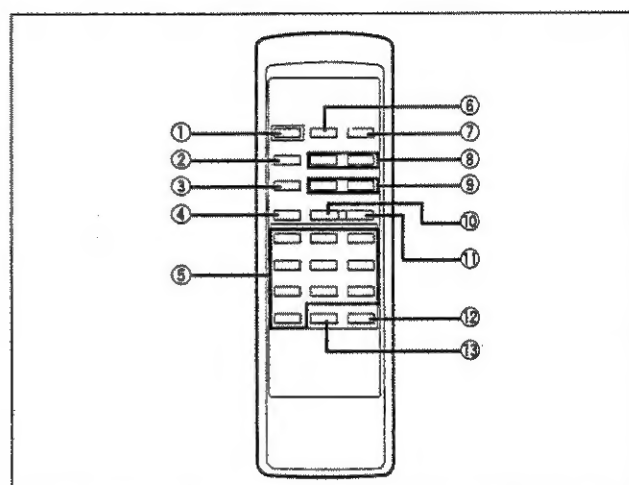

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- ① **POWER button**
- ② **PGM button**
- ③ **MODE button**
- ④ **Stop button (■)**
- ⑤ **Digit buttons (0 - 9)**
- ⑥ **REPEAT button**
- ⑦ **RANDOM button**
- ⑧ **DISC buttons (-/+)**
- ⑨ **Track search buttons (◀◀ / ▶▶)**
- ⑩ **Pause button (||)**
- ⑪ **Play button (▶)**
- ⑫ **TRACK SET button**
- ⑬ **DISC SET button**

BASIC OPERATION

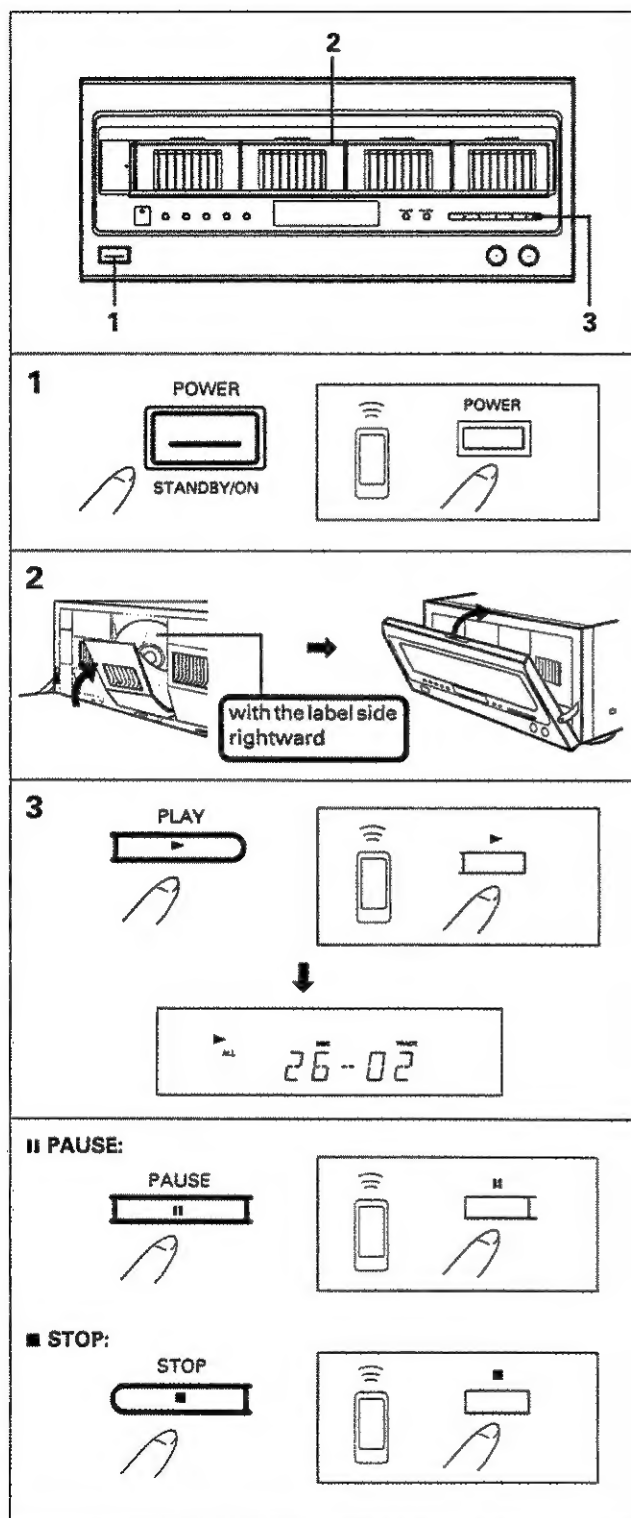

Operations indicated by the [] mark are performed with the remote control unit.

To play a compact disc

- 1 Turn on the power of the player.
- 2 Insert discs into the Rolling Rack, and close the rack and the front panel.
 - Insert discs to be played into the Rolling Racks beforehand. (Refer to "BEFORE OPERATING THE PLAYER" on page 8.)
- 3 Press **PLAY** ► on the front panel or ► on the remote control unit to start playback.
 - The ► indicator in the display window lights.
 - Playback starts with the desired mode if the playing mode is selected beforehand. In the program playback mode, the first programmed step is played back. In the custom playback mode, playback starts from the lowest disc number.
 - Playback starts with ALL mode unless the playing mode is not specified.
 - The rack indicator which contains the disc being played blinks.
 - Discs in the Rolling Rack other than the disc being played can be changed during playback. The rack indicator which contains the disc being played blinks rapidly when the front panel and other Rolling Racks are opened in the playback mode.
 - While the front panel and the Rolling Rack are opened, the Rolling Rack's number which cannot be opened appears on the display. ("RACK 2" means Rolling Rack 2 cannot be opened.)

NOTES:

- When "ALL-no" appears on the display, it means no discs are in the player.
- The Rolling Rack which contains the disc being played cannot be opened, and discs cannot be changed in that rack.
- While opening of the front panel or one of the Rolling Racks, the player will not enter the playback mode even though ► or RANDOM is pressed. Be sure to close the Rolling Rack and the front panel before pressing ► or RANDOM.
- While the front panel and the Rolling Rack are opened, the search operation for other discs cannot be carried out.

To pause playback temporarily:

Press **PAUSE** II on the front panel or II on the remote control unit. The II indicator lights and playback is paused at that point. Pressing II again or ► resumes playback from the position where II was pressed.

To stop playback:

Press **STOP** ■ on the front panel or ■ on the remote control unit. The player enters stop mode with Last disc memory.

Last disc memory

When **STOP** ■ on the front panel or ■ on the remote control unit is pressed, or the power is turned off, the player memorizes the disc which playback was stopped. Therefore, playback can be resumed from the last played disc.

In the program playback mode, playback resumes from the first programmed disc.

Last disc memory function can be carried out in ALL, SINGLE, or CUSTOM playback mode.

Last disc memory does not function after random playback.

1. When **STOP** ■ or ■ is pressed during normal playback, the player enters standby mode with Last disc memory.
 - Even when the power is turned off, the playing mode, the program mode, the custom mode, or the last played disc is stored in the player.
 2. Press **PLAY** ► or ►.
- Playback starts from the disc which playback was stopped. (When the power is turned off, turn on the power, and then press **PLAY** ► or ►.)

 
Selecting the playing mode

Press the **MODE** button on the front panel or remote control unit in **stop mode** to select the desired mode. Playback starts in selected mode.


Each time the button is pressed, the playing mode changes circularly.

- ALL : continuous playback on all discs
- SINGLE : continuous playback on one disc
- CUSTOM : continuous playback on selected discs

in stop mode



during playback

 

- When the SINGLE mode is selected during playback, the SINGLE mode playback is carried out from the disc being played.
- Pressing the MODE button in the program mode will cancel the programmed contents.


NOTES:

- CUSTOM mode cannot be selected during playback.
- When the power is turned on, playback starts with the last selected mode.

Time display

During playback, pressing TIME on the front panel changes the time display in the following sequence: ① DISC/TRACK (disc number and track number being played) → ② TIME (elapsed playback time of the track being played) → ③ TOTAL (Displays the total playback time of each disc)


- The TOTAL time display ③ in the program mode shows the total programmed step.
- The TOTAL time display ③ in the CUSTOM mode shows the total disc number entered into CUSTOM. (only in the stop mode)
- The TOTAL time display ③ during playback will disappear in about 5 seconds.

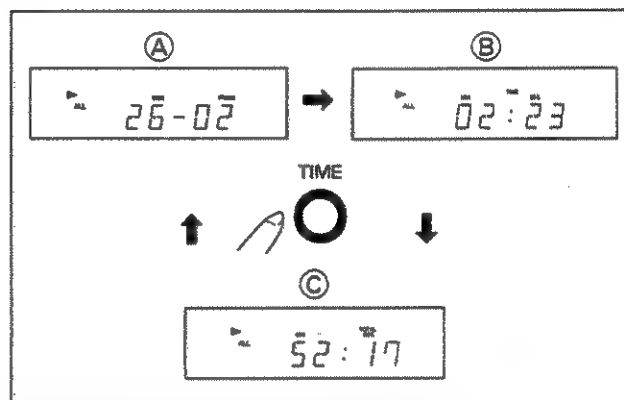

If the player cannot detect a disc because of vacancy or inserting in a wrong way in playback mode, the display ④ will appear for about 3 seconds, and the next disc will be played back.

If the selected disc cannot be detected in the SINGLE playback mode, the playback will stop. (Information of 'no disc' is stored in the memory of the player. Once the information is stored, playback continues after ④ is displayed for about 3 seconds.)


This function is carried out in the normal playback mode, search mode, program playback mode, or custom playback mode.

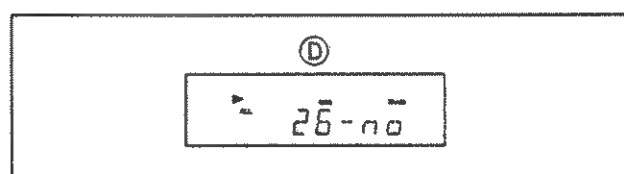

BASIC OPERATION

Direct search - To search for a particular disc or track (with remote control unit)

in playback or stop mode

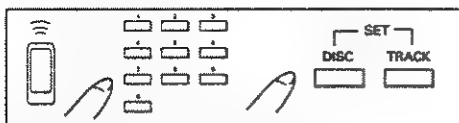

The player searches for the specified disc or track, and playback starts directly from the desired disc or track.

Example

To search for track No. 5 on disc No. 37:

[3] [7] [DISC SET] [5] [TRACK SET]

NOTE:

If the DISC SET button or the TRACK SET button is not pressed in 5 seconds after the digit buttons are pressed, the display returns to the previous mode.

- When the disc is selected with the digit buttons and the RANDOM button in the SINGLE mode, the single random playback resumes with the specified disc.
- If the player cannot detect the disc, "*** - no" is displayed for about 3 seconds. In the ALL mode, the next disc is searched for. In the SINGLE mode, the search operation will stop. If the player recognizes the vacancy of the disc beforehand, "*** - no" is displayed for about 3 seconds and then the search operation continues.
- In the CUSTOM mode, only the selected discs are searched for. If discs other than selected discs are searched for in CUSTOM playback mode, "*** - no" is displayed for about 3 seconds while the CUSTOM indicator blinks.

Disc search - To search for a particular disc

in playback or pause mode



The player searches for the specified disc and playback starts from the beginning of that disc.

Press the DISC NUMBER +/- button on the front panel or DISC +/- button on the remote control unit. If a disc is searched for in the stop mode, press PLAY or ► to resume playback.

- When DISC NUMBER +, DISC +, or DISC NUMBER -, DISC - is kept pressed, the player automatically searches for the disc number upward or downward.
- Pressing DISC NUMBER - or DISC - on disc No. 1 searches for disc No. 100. Pressing DISC NUMBER + or DISC + on disc No. 100 searches for disc No. 1.
- The searching speed becomes faster when the button is kept pressed.
- The TIME display changes to the DISC display during search. After the search operation is finished, the display returns to the TIME display.
- When DISC NUMBER +/- or DISC +/- is pressed in the program playback mode, the program mode is cancelled and the programmed contents are cleared. All discs are searched for.
- In the CUSTOM mode, only selected discs are searched for.
- When DISC NUMBER +/- or DISC +/- is pressed in random playback mode, the random playback mode is cancelled, and discs are searched for in the mode just before the random playback starts.

Track search - To search for a particular track

in playback or pause mode



When ►►► on the front panel or ►►► on the remote control unit is pressed once, playback advances to the beginning of the next track. When ►►► on the remote control unit is kept pressed, playback advances to successive tracks on the disc.

When ◀◀◀ on the front panel or ◀◀◀ on the remote control unit is pressed once, playback returns to the beginning of the track being played. When ◀◀◀ on the remote control unit is kept pressed, playback returns to earlier tracks on the disc.

If the track is searched for in the stop mode, press PLAY ► or ►. Playback starts from that track.

- Pressing || during search enters the pause mode after the search operation is finished.
- If ◀◀◀ or ►►► is pressed in the pause mode, the player enters the pause mode after the search operation is finished.
- " — " indicator blinks while the track is searched.
- The TIME display changes to the DISC display during search. After the search operation is finished, the display returns to the TIME display.

NOTES:

- Track Search can be carried out from 1st track through 99th track before TOC is read.
- During program playback, ◀◀◀ ◀◀ or ►►► ►►, ◀◀◀ or ►►► can be used to select the programmed track.

Manual search - To search for a particular passage

in playback or pause mode




While ►►►► is kept pressed, playback rapidly advances toward the end of the disc. When playback reaches the end of the disc, the player enters pause mode and "End" is displayed. While ◀◀◀◀ is kept pressed, playback rapidly reverses toward the beginning of the disc.

When the desired passage is reached, release ►►►► or ◀◀◀◀. The player enters playback mode or pause mode where ►►►► or ◀◀◀◀ is released.

- If playback reversed toward the beginning of the track being played with ◀◀◀◀ during program playback, playback starts from that point. When the next track is reached, the player enters pause mode. When ◀◀◀◀ is pressed at this point, the search operation starts.
- While ◀◀◀◀ or ►►►► is pressed in DISC/TRACK display mode, the display changes to the TIME display. When the button is released, the display returns to the DISC/TRACK display.
- In pause mode, the sound is not output during search. However, the searching speed becomes faster than in playback mode.

VARIOUS OPERATIONS

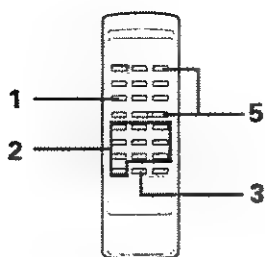

CUSTOM playback

All discs (1 ~ 100) can be divided into 3 CUSTOM modes as your preference. Discs can be selected and stored in memory by music type or artists, etc.

Example: enter disc No. 3 and No. 12 into CUSTOM II.

1 In the stop mode, press the MODE button so that the CUSTOM II indicator lights.

If some disc number appears, press CLEAR on the front panel.

2 Select disc No. 3 with the digit button on the remote control unit.

- When the disc is selected with the DISC NUMBER +/- buttons on the front panel, the disc number is entered automatically in about 2 seconds.
- If the selected disc is not inserted in the Rolling Rack, '*** - no' appears on the display.

3 Press the DISC SET button on the remote control unit.
The indicators of CUSTOM II and disc number blink once.

4 To enter the disc No. 12, repeat steps 2 and 3.

Up to 100 discs can be entered into one CUSTOM.
Discs can be added even after the entry is completed.

5 Press PLAY ►, ►►, or RANDOM.

Playback starts from the lowest disc number in the CUSTOM.
If RANDOM is pressed, the random playback starts with the selected discs.

To check the entered disc number:

In stop mode, press TIME so that the TOTAL indicator lights and then press DISC NUMBER + or DISC -. Each time the button is pressed, entered disc numbers appear on the display. When all discs in one CUSTOM are checked, (A) appears on the display.

 




To clear all discs of each CUSTOM:

Press CLEAR on the front panel.

NOTE:


Re-CUSTOM programming cannot be modified.

- DISC NUMBER +/- or DISC +/- can be used with the selected discs only.
- When the disc other than the stored disc into CUSTOM is selected with the digit buttons and DISC SET, '*** - no' is displayed for about 3 seconds, and the CUSTOM indicator blinks.
- Even when the power is turned off, discs stored in the CUSTOM cannot be cleared.
- When the selected disc is not in the player, '*** - no' is displayed for about 3 seconds. The selected disc is erased from the memory, and the next disc is searched for.

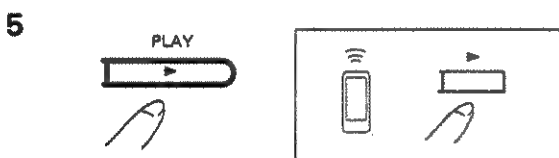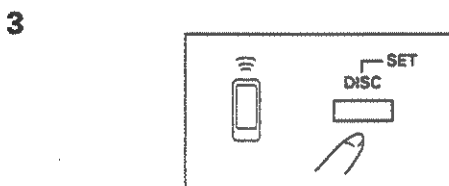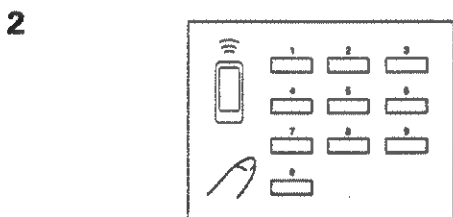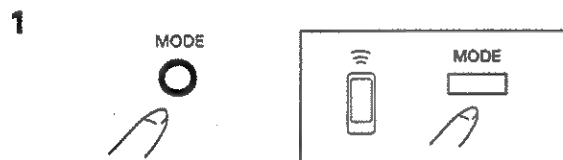

VARIOUS OPERATIONS

To repeat playback (repeat play)

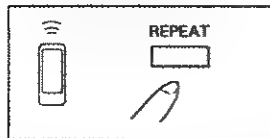

Each time the REPEAT button on the remote control unit is pressed, the repeat mode changes circularly. (one track repeat → ALL repeat → OFF)

To repeatedly play the displayed track, press REPEAT on the remote control unit so that the REPEAT ► 1 indicator lights. REPEAT can be pressed in any playback mode (normal, random, or program).

To repeatedly play all tracks on all of the discs in normal playback mode or in the specified playback mode (Single playback, Custom playback or Program playback), press REPEAT so that the REPEAT indicator and each repeat mode indicator (ALL, SINGLE, CUSTOM, or PGM) light.

ALL repeat : all discs (1 ~ 100) repeat

SINGLE repeat : one disc repeat

CUSTOM repeat : all selected discs repeat

PROGRAM repeat : all selected tracks repeat

- To exit repeat mode, press REPEAT so that the REPEAT ► 1 or REPEAT indicator goes off.
- To cancel the repeat playback mode, press STOP ■ on the front panel or ■ on the remote control unit during repeat playback.

Random playback - To play all tracks in random order



The RANDOM indicator lights and random playback starts in the specified playback mode.

ALL mode : One track on each disc is played in a random order. When totally 100 tracks are played back, playback automatically stops. If discs inserted in the player are less than 100, random playback continues until 100 tracks are played back.

SINGLE mode : All tracks on one disc are played in a random order. When all tracks are finished playing, playback stops.

CUSTOM mode : One track on each selected disc is played in a random order. When totally 100 tracks are played back, playback automatically stops. If selected discs are less than 100, random playback continues until 100 tracks are played back.

To exit the random playback mode:

Select the disc other than the disc being played by pressing one of the digit buttons on the remote control unit or DISC NUMBER +/- or DISC +/-.

- If other mode is selected in random playback mode, random playback will start with the selected mode. If the Rolling Rack is opened in random playback mode, discs in the opened rack may be played again.
- When the PGM button is pressed in random playback mode, the random playback is cancelled and the player enters program mode.

NOTE:

During random playback, the CUSTOM mode cannot be selected with the MODE button.

- If RANDOM is pressed in the random playback mode, another track is selected in random order.
- If RANDOM is pressed while programming, the programmed contents are cleared, and random playback starts in ALL mode.


ADLC (Automatic Digital Level Controller)

When the difference of recording level between discs is noticeable, the volume level should be adjusted for each disc, especially during program playback or random playback whose tracks are selected between 2 discs or more. In such cases, pressing ADLC automatically sets the output level to the proper level, decreasing high output level. When ADLC is turned on, the ADLC indicator lights.

- To turn off ADLC, press ADLC so that the ADLC indicator goes off.
- With some selections, sound becomes unnatural. In such cases, turn off ADLC.



TO PLAY ONLY DESIRED TRACKS/DISCS

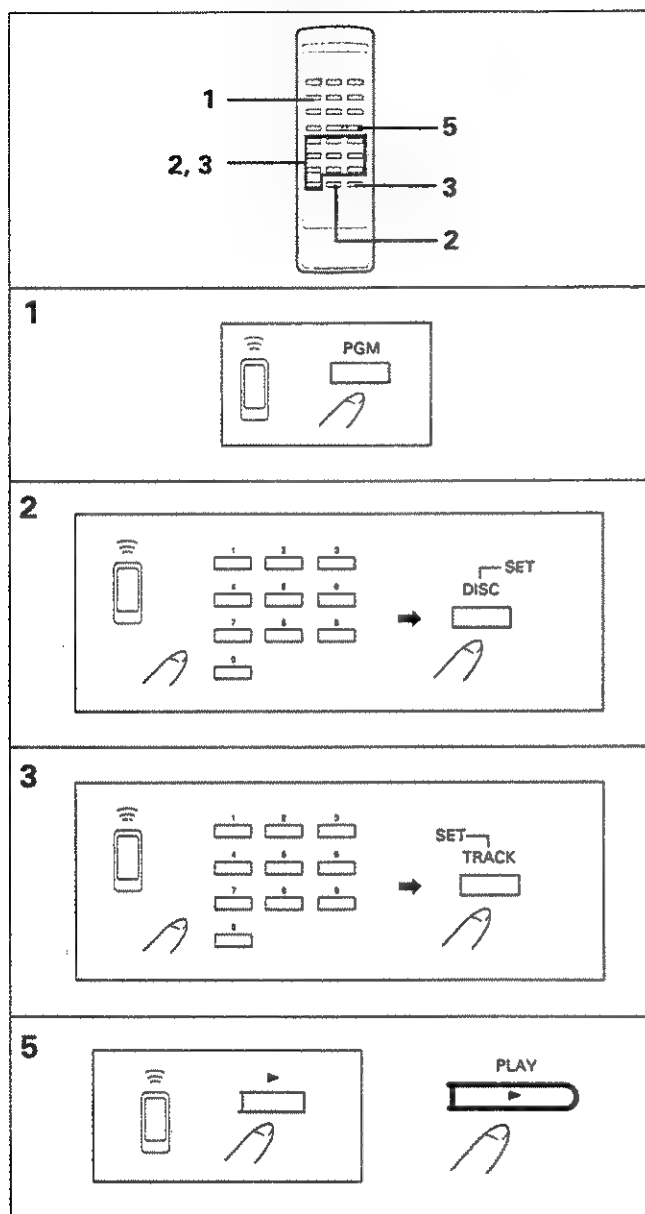

Disc all program

If only disc No. is entered, and "AL" appears on the display, all tracks on the disc can be programmed.

- Disc all program mode is cancelled when the track number is entered.
- Disc all programming cannot be carried out during playback.

Direct program

During normal playback, the track being played can be programmed.

1. Press PGM to enter the program mode.
 2. If you wish to program the track currently playing, press PGM while the track is playing.
- Direct programming is not possible during program playback.

Program playback - To program tracks/discs in desired order

Only in stop mode, disc programming is possible.

Track programming is possible in stop or playback mode. However, **◀◀** or **▶▶** cannot be used to select tracks during playback mode. Select stop mode or playback mode before programming.

1 Press PGM on the remote control unit.

- The PGM indicator lights.

2 Select the disc number which contains the track to be programmed with the digit buttons, and then press the DISC SET button.

To program entire discs, enter the desired disc numbers with the digit buttons and DISC SET, and then go to step 4. Make sure that the player is in stop mode for Disc programming.

- When the DISC SET button is pressed, "AL" (all tracks) appears on the display.
- When the disc number is programmed, the PGM indicator, the disc No. and the track No. blink.
- Only in stop mode, you can use the DISC **◀/+** buttons. After selecting the disc No., press DISC SET.

3 Enter the track No. to be programmed with the digit buttons and then press the TRACK SET button.

Only in stop mode, you can use **◀◀** or **▶▶**. After selecting the track No., press TRACK SET.

- When the track number is programmed, the PGM indicator, the disc No. and the track No. blink.

4 Repeat steps 2 and 3 to program other tracks.

5 Press ▶ or PLAY ▶.

The tracks are played in the programmed order.

NOTE:

When the disc number is selected with DISC **◀/+** in step 2, and when the track is selected with **◀◀** or **▶▶** in step 3 in stop mode, the displayed disc No. or track No. is automatically programmed if **◀◀** or **▶▶** is not pressed within 2 seconds. Therefore, be sure to press DISC **◀/+** or **◀◀**, **▶▶** sequentially until the desired disc No. or track No. appears on the display.

To stop Program playback, press ■.

- Programs containing up to 32 steps can be created.
- Programming discs or tracks can be carried out during playback.
- The program contents will not be erased even if the power is turned off.
- When DISC **◀/+** is pressed in the program playback mode, the program mode is cancelled, and the program contents are cleared. The player searches for the disc in ALL mode.
- When the programmed disc cannot be detected in program playback mode, or the programmed track cannot be detected after TOC is read, that programmed step is cancelled. "**** - no*" is displayed for about 3 seconds, and next step is played back.

TO PLAY ONLY DESIRED TRACKS/DISCS

To preserve the program

1 Press PGM during normal playback.

The player enters to the program mode. Programming can be carried out while a track is played back.

When programming is completed, the track being played is stopped.

2 Press ► to start the program playback.

Programming a pause

Inserting a pause in your program can be very useful when carrying out recording. Press **II** instead of entering a track number. "PAUSE" appears in the display window.

- For example, when recording on both sides of a cassette tape, if you program a pause after the last track to be recorded on the first side, program playback will pause at that point to allow you to switch tape sides. To resume program playback after the player enters pause mode, press **II**.

NOTES:

- A pause can be programmed only when the program procedure is performed under stop mode.
- A pause cannot be programmed at the beginning of a program (P-01), nor can two pauses be programmed one after the other.
- A pause inserted in a program is counted as one step.

To erase a programmed step






In the program mode, press CLEAR.

The last program step is erased and the contents of the previous program step are displayed (for 5 seconds during playback).

NOTE:

Tracks preceding the currently playing track cannot be erased during program playback.

To clear all of the program contents and to cancel the program mode

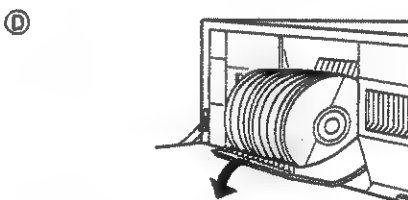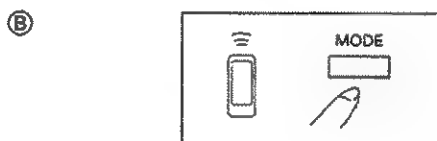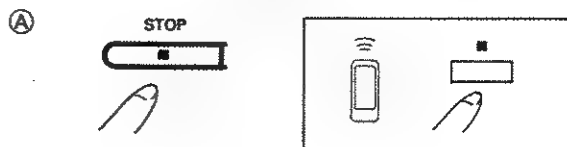




- Ⓐ In the stop mode, press **■**.
- Ⓑ In the program mode, select the other mode.
- Ⓒ In the program mode, press RANDOM, DISC NUMBER **-/+**, or DISC **-/+**.
- Ⓓ Open the Rolling Rack. The programmed contents of discs in the rack is cleared.

TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used.

If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Probable cause	Remedy
The Rolling Rack is not opened when  is pressed.	<ul style="list-style-type: none"> Power plug is disconnected from outlet. A disc in the rack is played. 	<ul style="list-style-type: none"> Connect plug to wall outlet. Stop playback.
When playback is started, it stops immediately. Pauses or stops during playback.	<ul style="list-style-type: none"> Disc is inserted in the wrong way. Smudges, etc., on the disc. 	<ul style="list-style-type: none"> Insert the disc correctly with the label side rightward. Clean the smudges from the disc and then play it again.
No sound	<ul style="list-style-type: none"> Output cables are connected incorrectly or loosely. Incorrect operation of stereo amplifier. Pin plugs and/or amplifier terminals are dirty. Player is in pause mode. The disc is loaded with the label side leftward. 	<ul style="list-style-type: none"> Connect properly. Check the settings of amplifier switches and sound volume controls. Clean away dirt. Press  or . Reload the disc with the label side rightward.
Sound is distorted, noise is output.	<ul style="list-style-type: none"> Incorrect connections. Pin plugs and/or amplifier terminals are dirty. Interference is being picked up from a TV set. 	<ul style="list-style-type: none"> Connect to amplifier's AUX or CD terminals. Do not connect to PHONO terminals. Clean away dirt. Switch OFF TV set, or move player away from TV set.
With certain discs, loud noise is produced, or play stops.	<ul style="list-style-type: none"> Disc has bad scratch or warp. Disc is extremely dirty. 	<ul style="list-style-type: none"> Replace the disc. Clean disc.
The picture of the TV screen is fluctuating or FM broadcast has noise interference.	<ul style="list-style-type: none"> Interference is being picked up from the CD player. 	<ul style="list-style-type: none"> Turn off POWER of the player, or move the player away from TV or tuner.
Remote control will not function.	<ul style="list-style-type: none"> Dead batteries. Too far from player or wrong angle. Obstruction between player and remote control unit. 	<ul style="list-style-type: none"> Replace batteries. The distance between remote control unit and player should be no more than about 7 meters. The operational angle against the front panel is within 30° from right or left end of player. Relocate remote control unit or remove obstruction.

Abnormal functioning of this unit may be caused by lightning, static electricity, or other external interference. To restore normal operation, turn the power off and then on again, or unplug the AC power cord and then plug it in again.

SPECIFICATIONS

1. General

Type	Compact disc digital audio system
Power requirements	
U.S., Canadian models	AC 120 V, 60 Hz
European models	AC 220-240 V, 50/60 Hz
Other models	AC 110-127 V/220-240 V (Switchable) 50/60 Hz
Power consumption	14 W
Operating temperature	+5°C - +35°C (+41°F - +95°F)
Weight	11.0 kg (24 lb 4 oz)
External dimensions	420(W) X 399(D) X 190(H) mm 16-9/16(W) X 15-11/16(D) X 7-1/2(H) in

2. Audio section

Frequency response	2 Hz - 20 kHz
S/N ratio	98 dB or more (EIAJ)
Dynamic range	96 dB or more (EIAJ)
Channel separation	96 dB or more (EIAJ)
Harmonic distortion	0.003 % or less (EIAJ)
Level difference between channels	1.0 dB or less (EIAJ)
Output voltage	2 ± 0.3 Vrms (EIAJ)
Wow and flutter	less than ±0.001% (W.PEAK) (below measurable level) (EIAJ)
Channels	2-channel (stereo)

3. Output terminal

Audio line output
Control input/output jacks (except for European models)
CD-DECK SYNCHRO jack
I/O INTERFACE (U.S. and Canadian models only)

4. Functions

Number of discs to be stored - maximum 100.

Basic Operation Buttons

- PLAY, PAUSE, STOP

Playback mode

- All Playback Mode
- Single Playback Mode
- Custom Playback Mode

Search Function

- Disc Search
- Track Search
- Manual Search

Programming

- Maximum 32 steps
- Pause
- Program Clear (single track or all tracks)

Repeat Functions

- 1 Track Repeat
- Single Repeat
- All Discs Repeat
- Program Repeat
- Single Random Repeat
- All Discs Random Repeat
- Custom Random Repeat
- Custom Repeat

Random Play

- Random Play (repeat also available)

Switching Display

Disc/Track Number, Time Consumed (track/disc), and Total Time

ADLC

Automatic Digital Level Controller

Memory Hold

Stored Playback Mode, Program Contents, or Custom Mode

Last Disc Memory

Direct Search with the Digit buttons (remote control unit)

Power On/Off (remote control unit)

CD-DECK SYNCHRO jack

Remote Control jack (except for European models)

5. Display

FL Tube Display

- Play indicator
- Pause indicator
- Playback Mode indicators (all, single, custom)
- Elapsed Time Display (min, sec)
- Total Time Display
- Disc Number, Track Number
- Program Step Number
- Custom Number
- Repeat indicator
- Random indicator
- Program indicator
- ADLC indicator

6. Accessories

● Remote control unit	1
● AAA/R03 dry cell batteries	2
● Output cable	1
● Control cable (except for European models)	1
● CD liner notes file	2
● Index label sheet	1
● Operating instructions	1

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

INDEX CARD

Copy or cut off these index cards, and fill in the titles of the discs in order inserted in the player. It is useful to search for the desired discs if these cards are inserted in the first or last page of the supplied CD liner notes file.

NO. 1
1 ~ 50


1	26
2	27
3	28
4	29
5	30
6	31
7	32
8	33
9	34
10	35
11	36
12	37
13	38
14	39
15	40
16	41
17	42
18	43
19	44
20	45
21	46
22	47
23	48
24	49
25	50

NO. 2
51 ~ 100

51	76
52	77
53	78
54	79
55	80
56	81
57	82
58	83
59	84
60	85
61	86
62	87
63	88
64	89
65	90
66	91
67	92
68	93
69	94
70	95
71	96
72	97
73	98
74	99
75	100

TO PLAY A COMPACT DISC

 
- 1 Turn on the power.



- 3 Press PLAY ► or ►.



- 2 Insert discs into the Rolling Rack, and close the rack and the front panel.

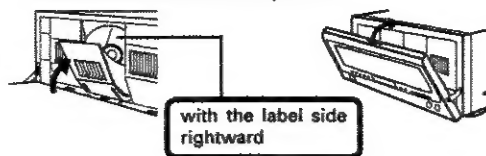


SELECTING THE PLAYING MODE

Press MODE.

DIRECT SEARCH

 
- 1 Select the disc number with the digit buttons.



- 2 Press DISC SET.



 - 3 Select the track number with the digit buttons.



- 4 Press TRACK SET.



DISC SEARCH

Press DISC NUMBER -/+ or DISC -/+.

TRACK SEARCH

 
Press ◀◀◀ or ▶▶▶, ◀◀ or ▶▶.

MANUAL SEARCH


Keep pressed ◀◀◀ or ▶▶▶.

CUSTOM playback

- 1 In the stop mode, press MODE.



 - 2 Select the disc No. with the digit buttons.




- 3 Press DISC SET.



- 4 Repeat steps 2 and 3 to select the desired discs.



 - 5 Press PLAY ► or ►.



REPEAT PLAY

 
Press REPEAT.

RANDOM PLAYBACK

Press RANDOM.

PROGRAM PLAYBACK


- 1 Press PGM.



- 2 Select the disc No. with the digit buttons and DISC SET.



 - 3 Select the track No. with the digit buttons and TRACK SET.



- 4 Repeat steps 2 and 3 to select the desired tracks.

- 5 Press PLAY ► or ►.



Published by Pioneer Electronic Corporation.
Copyright © 1994 Pioneer Electronic Corporation.
All rights reserved.

PIONEER ELECTRONIC CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS [USA] INC.

2265 East 220th Street, Long Beach, California 90810, U.S.A.

P.O. BOX 1720, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway Markham, Ontario L3R 0P2, Canada

PIONEER ELECTRONIC [EUROPE] N.V.

Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium, TEL: 03/750.05.11

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911

<94B04WF4D01>

Printed in Japan <PRB1213-A>